



Setting up Your Terminal

Moneris[®] Vx810 Duet



IMPORTANT: READ FIRST

If this is your first POS terminal with Moneris:

Enclosed you should find your Moneris Visa Merchant Agreement/Moneris MasterCard Merchant Agreement/Moneris Debit Card and Terminal Agreement/Terms and Conditions. If this document is not enclosed, please do not proceed with this installation. Instead, contact us at **1-866-319-7450**. Once you have obtained the required document, please proceed with your installation.

Before you get started

Important Notes

Your terminal is pre-programmed with a temporary password. For your own protection we strongly recommend that you change the temporary password to a secure password of your own. Follow the steps for *Changing the terminal password* on page 11.

The terminal language cannot be changed until the steps in *Initialization and logon* (page 8) have been completed. If required, follow the steps for *Changing the terminal language* under *Additional options* on page 9.

1. Please confirm that you received:
 - the Moneris Vx810 Duet terminal and base
 - the power cable and power adaptor cable
 - the dial and/or Ethernet cables.
2. If your terminal will be communicating with the Moneris host over **High-Speed Ethernet**, please review the *Moneris IP Readiness Checklist* (available at moneris.com/checklist) and ensure that your Ethernet service is ready to support your terminal.
3. If you ordered the optional **Vx810 external PINpad**, please confirm that you have received the PINpad and the PINpad power cable.
4. If you ordered the optional **modular contactless reader**, please make sure the reader is connected to the Vx810 terminal and that your account is configured for contactless transactions.

Note: *If you ordered the Vx810 external PINpad as well as the contactless reader, the contactless reader is connected to the PINpad instead of to the Vx810 terminal.*

5. Make sure you have the following information (provided when Moneris contacted you to confirm your terminal order):
 - Moneris Merchant ID: If you currently have a 9-digit merchant number beginning with a 1, 2 or 4, simply add 0030 to the beginning (i.e., 123456789 becomes 0030123456789)
 - Settlement type: **System Close** (Moneris automatically settles your transactions at the end of each day) or **Merchant Close** (you are responsible for settlement/close batch at the end of each day).
 - Communications type: **Dial** or **IP/Ethernet** (with or without dial backup).
 - Optional features (e.g. **gift cards**, **Ernex Terminal ID**).

If any of the above required elements are missing, please call the General Inquiries number below.

General Inquiries: 1-866-319-7450


Tips for moving through the menus

- To scroll down or up, press the **first purple key from the left**. The arrow above the key indicates the direction, e.g. if the arrow points down, you can scroll down.
- To change the direction of the arrow, press the yellow **CORR** key.
- To select a menu item, press the **grey function key (F1, F2, F3 or F4)** that it appears beside.
- To finish entering information and move on to the next step, press the green **OK** key.

Hardware setup

1


Dial Setup

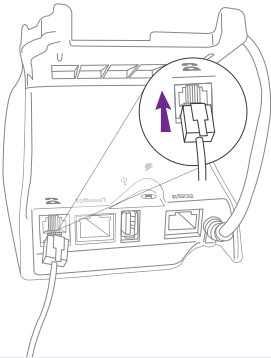

- Plug one end of the dial cable into the dial port on the back of the base (below the ☎ icon).
- Plug the other end of the dial cable into an analog phone jack.

Recommendation: Use a dedicated phone line for the terminal. Sharing the line with another device can cause communication problems on the terminal. If using a splitter, test both devices and note that the terminal and the other device cannot use the phone line at the same time.

High-Speed Ethernet Setup

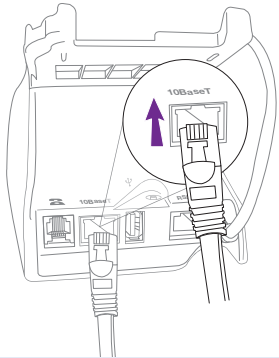


- Plug one end of the Ethernet cable into the 10BaseT port on the back of the base.
- Plug the other end of the Ethernet cable into the router/switch/hub/internal wiring – whatever is applicable to the high-speed Internet service at your specific location (please refer to the *Moneris IP Readiness Checklist* if necessary; available at moneris.com/checklist).

2

If you are using an external PINpad, go to step 3.

Locate the power cable and the power adaptor cable, plug the power cable into the power adaptor, then plug the other end of the power adaptor cable into the power port (⚡) on the base.


Go to step 4.

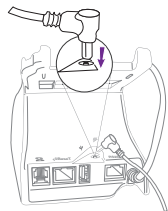


3

External PINpad Setup


- a. Locate the PINpad cable (attached to the external PINpad).

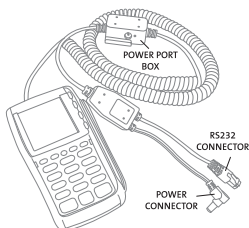

- b. Plug the RS232 connector into the RS232 port on the base.
c. Plug the power connector into the power port (⚡) on the base.

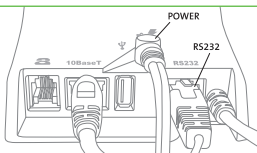

- d. Locate the power cable and the power adaptor cable.
e. Plug the power cable into the power adaptor.
f. Plug the other end of the power adaptor cable into the power port (⚡) on the power-port box in the middle of the PINpad cable. Insert the connector at a right angle to the box then turn it counter-clockwise to lock it in place.

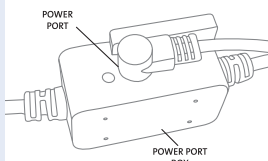

4

Plug the other end of the power cable into a power source.

Recommendations: Always plug the power cable into the power source last to avoid power surges. Use a power bar with surge protection where possible.

IMPORTANT: You must use the exact power adaptor and cables provided by Moneris Solutions to work with the Moneris Vx810 Duet terminal (and the external PINpad, if connected). Failure to do so may affect the operability of or cause damage to the equipment.

5

Wait while the device(s) powers up. When the applications menu appears, proceed to *Communications setup* on page 5.

Communications setup

If you're using dial:

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in the temporary password and press the green **OK** key.
4. Scroll down and select **Host**.
5. If "Comm Link Type" is set to "Dial", go to step 7. If not, go to step 6.
6. Select **Edit**, select **Next** until "Dial" appears then select **Slct**.
7. Select **Exit**, then select **OK** to save changes.
8. If you need to dial a prefix (for example, a 9) to connect to an outside line, complete the steps below. Otherwise proceed to Step 9.
 - a. Scroll down and select **TERMINAL**.
 - b. Select **Next** until "PABX Code" appears.
 - c. Select **Edit**, key in the **prefix** (e.g. 9) and press the green **OK** key.
 - d. Select **Exit**, then select **OK** to save changes.
9. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.

Entering the initialization phone number


1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in the temporary password and press the green **OK** key.
4. Select **Comm** then select **Next** until "Pri Init Phone" appears.
5. Select **Edit**, key in the initialization phone number as follows then press the green **OK** key:

If your merchant number begins with:	Key in:
00301	1-888-699-7299
00302	1-888-358-8602
00304	1-888-332-8433

6. Select **Exit**, then select **OK** to save changes.
7. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.

Proceed to *Entering merchant IDs and terminal IDs* on page 7.

If you're using IP:

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in the temporary password and press the green **OK** key.
4. Scroll down and select **Host**. "Comm Link Typ" appears.
5. Select **Edit**, select **Next** until "CommServer" appears then select **Slct**.
6. Select **Next** until "Settle Comm Type" appears.
7. Select **Edit**, select **Next** until "CommServer" appears then select **Slct**.
8. Select **Exit**, then select **OK** to save changes.
9. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.
10. While the applications menu is displayed, press the **2** key.
11. Key in the temporary password and press the green **OK** key.
12. Press the **first purple key on the right** (below the  icon) then select **IP**. "IP Settings" appears.

Proceed with the steps for Dynamic IP or Static IP below, depending on your location's IP service.

If you're using Dynamic IP:

1. When "IP Settings" appears, select **Edit**.
2. Select **DHCP**.
3. Select **Exit**, then select **Yes** to save changes. CommServer restarts and the terminal reboots back to the applications menu.

Proceed to *Entering merchant IDs and terminal IDs* on page 7.

If you're using Static IP:

IMPORTANT: Disconnect the Ethernet cable from the base BEFORE completing these steps.

1. When "IP Settings" appears, select **Edit**.
2. Select **Static**.
3. If your Ethernet network requires the parameters listed below, perform steps 4 and 5 for each parameter. Otherwise go to step 6.
Note: Contact your Internet Service Provider (ISP) to determine the addresses.
 - IP Address
 - Subnet mask
 - Gateway IP Address
 - DNS1 IP Address
 - DNS2 IP Address
4. Select **Next** to view these parameters.
5. Select **Edit** to key in the address for each of these parameters. To key in a period (.), press the number **1** then the **ALPHA** key once.
6. Select **Exit**, then select **Yes** to save changes. CommServer restarts and the terminal reboots back to the applications menu.
7. Re-connect the Ethernet cable to the base.

Proceed to *Entering merchant IDs and terminal IDs* on page 7.

If you're using dial communications as backup for IP:

When you have finished setting up communications for IP:

1. **Plug in the dial cable:** Follow the steps in *Dial Setup* in the *Hardware setup* section on page 3.
2. On the applications menu, select **DEBIT & CREDIT**.
3. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
4. Select **Setup**, key in the temporary password and press the green **OK** key.
5. Scroll down and select **Host**.
6. Select **Next** until "Backup Support" appears.
7. Select **Edit**, select **Next** until "Auto Backup" appears then select **Slect**.
8. Select **Exit** then select **OK** to save changes.
9. Press the red **CANC ANNUL** key then press the ***** (asterisk) key to return to the applications menu.

Note: For other Backup Support options, see the Moneris Vx810 Duet Operating Manual.

Entering merchant IDs and terminal IDs

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in the temporary password and press the green **OK** key.
4. Scroll down and select **Merchant**. "Term Id" appears.
5. Select **Edit**, key in the **Terminal ID number** (the eight-digit number starting with "28" found on the back of the handheld terminal, e.g. 28123456) and press the green **OK** key.
6. Select **Next** until "Merch Num" appears.
7. Select **Edit**, key in your **13-digit Merchant number** (e.g. 0030123456789) and press the green **OK** key.

Note: If you currently have a 9-digit merchant number beginning with a 1, 2 or 4, simply add 0030 to the beginning (i.e., 123456789 becomes 0030123456789).

8. Select **Exit**, then select **OK** to save changes.
9. Press the red **CANC ANNUL** key, then press the ***** (asterisk) key to return to the applications menu.

Proceed to *Initialization and logon* on page 8.

IMPORTANT: If you have set up an optional external PINpad for use with your terminal, you must configure it on the terminal BEFORE following the initialization and logon instructions on page 8. For PINpad configuration instructions, see the steps for *Configuring the external PINpad* under *Additional options* on page 9.

Initialization and logon

IMPORTANT: If you have set up an optional external PINpad for use with your terminal, you must configure it on the terminal BEFORE following the initialization and logon instructions below. For PINpad configuration instructions, see the steps for *Configuring the external PINpad* under *Additional options* on page 9.

1. Select **DEBIT & CREDIT**.
 2. When the transaction menu appears, press the green **OK** key to access the CONFIGURATION menu.
 3. Scroll down and select **Initialize**.
 4. When “Retain Settings?” appears, select **Yes**.
 5. When “Transmitting...” and “Receiving...” appear, please wait while the terminal communicates with Moneris.
 6. When the initialization is finished, “Init Successful” appears on the terminal then the transactions menu appears.
 7. **If you have set up and configured an external PINpad**, “WELCOME/BONJOUR” appears on the PINpad.
 8. On the terminal, press the green **OK** key to access the CONFIGURATION menu.
 9. Scroll down and select **Host Logon**.
 10. Key in the temporary password and press the green **OK** key.
 11. “Logon Success” appears, then the transactions menu appears.
- Your terminal is ready to process transactions.

Additional options

Configuring the external PINpad

IMPORTANT: You must configure the external PINpad on your terminal **BEFORE** following the instructions in *Initialization and logon* on page 8.

Note: Before you configure the PINpad, make sure you have followed the External PINpad setup instructions on page 4 in the Hardware setup section.

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in **your password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.
4. Select **Terminal**. “Tip % nn.nn” appears on the Edit Terminal menu.
5. Select **Next** until “PINpad Type” appears.
6. Select **Edit** then select **Next** until “External XPI” appears.
7. Select **Slct**.
8. Select **Exit** then select **OK** to save changes.
9. Press the red **CANC ANNUL** key then press the ***** (asterisk) key to return to the applications menu.
10. Power down and restart the terminal (disconnect the power supply and reconnect).

Proceed to *Initialization and logon* on page 8.

Changing the terminal language

Note: The terminal language can only be changed **AFTER** the terminal has been successfully initialized (see *Initialization and logon* on page 8).

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Scroll down and select **Set Language**.
4. Select **ENG** (English) or **FRN** (French).
5. Press the ***** (asterisk) key to get back to the applications menu.

Configuring the modular contactless reader

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in **your password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.
4. Select **Terminal**.
5. Select **Next** until “Enable CTLS” appears.
6. Make sure “Enable CTLS” is set to **ON**. If yes, skip to step 8. If no, proceed with step 7.
7. Select **Edit** then select **On**.
8. Select **Exit**. If prompted to save changes, select **OK**.
9. Press the red **CANC ANNUL** key then press the ***** (asterisk) key to return to the applications menu.

Enabling cashback, tip or invoice number

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in **your password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.

For cashback option

To change the default values for cashback, please refer to the *Vx810 Duet Operating Manual* available for download from moneris.com/Duet.

1. Select **Terminal**.
2. Select **Next** until “CashBack Option” appears.
3. Select **Edit** then select **ON**.
4. Select **Exit**, then select **OK** to save changes.
5. Press the red **CANC ANNUL** key, then the *** (asterisk)** key to return to the applications menu.

For basic tip processing

To change the default values for the enhanced tip options, please refer to the *Vx810 Duet Operating Manual* available for download from moneris.com/Duet.

1. Select **Terminal**.
2. Select **Next** until “Tip Processing” appears.
3. Select **Edit** then select **Next** until “On – Prompt” appears then select **Slct**.
4. Select **Exit**, then select **OK** to save changes.
5. Press the red **CANC ANNUL** key, then the *** (asterisk)** key to return to the applications menu.

For invoice number


1. Scroll down and select **Merchant**.
2. Select **Next** until “Ask Inv Num?” appears.
3. Select **Edit** then select **ON**.
4. Select **Exit**, then select **OK** to save changes.
5. Press the red **CANC ANNUL** key, then the *** (asterisk)** key to get back to the applications menu.

Changing the terminal password

IMPORTANT: For security purposes, we strongly recommend you change the terminal's temporary password to a secure password of your own. The temporary password should NOT be changed until AFTER the terminal has been successfully initialized (see *Initialization and logon* on page 8). The new password can be 5-10 digits long and must consist of numbers only.

1. Select **DEBIT & CREDIT**.
2. When the transactions menu appears, press the green **OK** key to access the CONFIGURATION menu.
3. Select **Setup**, key in the temporary password and press the green **OK** key.
4. Select **Terminal**.
5. Select **Next** until "Manager Pwd" appears.
6. Select **Edit**, key in **your new password** and press the green **OK** key.
7. Select **Exit**, then select **OK** to save changes.
8. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.

Loading paper

1. Remove the terminal from the base.
 2. On the base, gently pull up on the latch (look for the  icon), then lift the printer cover up and back.
 3. Prepare the new paper roll: Loosen the glued leading edge of paper and unwind the paper roll past any glue residue on the paper, or remove the protective strip.
 4. Place the paper roll into the printer tray so that the paper rolls out from the underside of the roll.
 5. Pull the leading edge of the paper up until any glue residue on the paper roll is past the cutting teeth of the printer.
 6. Close the printer cover and lock it by gently pressing directly on it until it clicks shut.
 7. Tear off the loose end of the paper by pulling it down then sideways across the metal teeth.
 8. Place the terminal back on the base.
 9. Select **DEBIT & CREDIT** and then press the **3** key to feed paper through the printer and ensure it is working properly.
 10. Press the *** (asterisk)** key to return to the applications menu.
- Shop for point-of-sale supplies and paper online at shopmoneris.com

Enabling gift cards

Didn't order gift cards but would like to find out more? Please call us at **1-866-319-7540**.

If you're using dial:

1. Select **GIFT & LOYALTY**.
2. When the Gift & Loyalty transactions menu (ERNEXGL) appears, press the **6** key to access the Quick Setup menu.
3. Key in **your new password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.
4. Select **Communications** then select **View**. "Comm Link Type" appears.
5. Select **Edit**, select **Next** until "DIAL" appears then select **Slct**.
6. Select **Exit**, then select **OK** to save changes.
7. Press the red **CANC ANNUL** key twice to go back to the Gift & Loyalty transactions menu.
8. Scroll down and select **Setup**.
9. Key in **your new password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.
10. Select **Comm**, then select **Next** until "Pri Auth Phone" appears.
11. Select **Edit**, key in the authorization phone number as follows, then press the green **OK** key:

If your merchant number begins with:	Key in:
00301	1-800-361-8645
00302	1-800-387-5480
00304	1-800-387-1623

12. Select **Next**. "Sec Auth Phone" appears.
13. Select **Edit**, key in the same authorization phone number as above, then press the green **OK** key.
14. Select **Exit**, then select **OK** to save changes.
15. **If you need to dial a prefix (for example, a 9) to connect to an outside line, complete the steps below. Otherwise proceed to Step 16.**
 - a. Scroll down and select **Terminal**.
 - b. Select **Next** until "PABX Code" appears.
 - c. Select **Edit**, key in the **prefix** (e.g. 9) and press the green **OK** key.
 - d. Select **Exit**, then select **OK** to save changes.
16. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.

Proceed to *Gift & Loyalty initialization* on page 13.

If you're using IP:

The Gift & Loyalty communication is set to IP by default. Simply complete the instructions for *Gift & Loyalty initialization* on page 13.

Gift & Loyalty initialization

1. Select **GIFT & LOYALTY**.
2. When the Gift & Loyalty transactions menu (ERNEXGL) appears, scroll down and select **Setup**.
3. Key in **your new password** (or if you have not changed it, key in the temporary password) and press the green **OK** key.
4. Select **Merchant**. “Merchant ID” appears.
5. Select **Edit**, key in your **Moneris Merchant ID** and press the green **OK** key.
6. Select **Next**. “Moneris Term ID” appears.
7. Select **Edit**, key in the **Moneris Terminal ID** and press the green **OK** key.
8. Select **Next**. “Ernex Term ID” appears.
9. Select **Edit**, key in the **Ernex Terminal ID** (provided to you when Moneris confirmed your terminal order) and press the green **OK** key.
10. Select **Exit**, then select **OK** to save changes.
11. When the terminal returns to the Setup menu, select **Comm**.
12. Select **Next** until “Device Type” appears.
13. Make sure the “Device Type” is set to **7C**. If yes, select **Exit** and go to step 16. If no, go to step 14.
14. Select **Edit**, key in **7C** and press the green **OK** key.
15. Select **Exit** then select **OK** to save changes.
16. When the terminal returns to the Setup menu, scroll down and select **Initialization**. “Ernex Term ID” appears.
17. Press the green **OK** key. The terminal will complete the initialization and return to the Setup menu.
18. Press the red **CANC ANNUL** key then the *** (asterisk)** key to return to the applications menu.

Your terminal is ready to process gift card transactions.

Additional options

For instructions on changing the terminal language and the terminal password in the Gift & Loyalty application, please refer to the *Moneris Vx810 Duet Operating Manual* available for download from moneris.com.

For instructions on performing gift card transactions, please refer to the *Moneris Quick Reference Guide for Gift Card Transactions*.

Online statements and reports

Check your monthly statement online using Moneris Merchant Direct. Merchant Direct provides 24/7 access to daily card transaction data (available by 7 a.m. the next morning and stored for six months) and monthly consolidated statements (available by the third day of the next month and stored for up to two years).

For detailed instructions, please refer to the *Thank You for Your Business* guide and page 9 of the *Merchant Operating Manual* included in this package.

For more information

- On performing transactions and end-of-day settlement procedures, please refer to the *Moneris Vx810 Duet Using Your Terminal* guide in this package.
- On all of the options available on your terminal and how to enable them, please refer to the *Moneris Vx810 Duet Operating Manual*. Visit moneris.com/duet to download a copy.



® Moneris and the Moneris Solutions design are registered trademarks of Moneris Solutions Corporation. All other marks or registered trademarks are the marks or registered trademarks of their respective owners.

© 2012 Moneris Solutions, 3300 Bloor Street West, Toronto, Ontario, M8X 2X2.

All Rights Reserved. This manual shall not wholly or in part, in any form or by any means, electronic, mechanical, including photocopying, be reproduced or transmitted without the authorized consent of Moneris Solutions.

For informational purposes only. Neither Moneris Solutions Corporation ("Moneris") nor any of its affiliates shall be liable for any direct, indirect, incidental, consequential or punitive damages arising out of use of any of the information contained in this guide.

Neither Moneris or any of its affiliates nor any of our or their respective licensors, licensees, service providers or suppliers warrant or make any representation regarding the use or the results of the use of the information, content and materials contained in this guide in terms of their correctness, accuracy, reliability or otherwise.

Your credit and/or debit card processing is separately governed by the Terms and Conditions of your Moneris VISA Merchant Agreement, your Moneris MasterCard Merchant Agreement and/or your Moneris Debit Card and Terminal Agreement (collectively, the "Merchant Agreements"), as applicable with Moneris. It is the merchant's responsibility to ensure that proper card processing procedures are followed at all times. Please refer to your Merchant manuals and the Terms and Conditions of your Merchant Agreement(s) for details. The *Moneris Merchant Operating Manual* is available for free download at moneris.com/en/Support/Downloads/MerchantManuals.aspx.